


中国3次排放对应 6W / 6U (B3S-ECM) Engine harness connector PIN array

发动机线束 接插件PIN配置

接插件 32P+20P+16P+1P... (对于IT4发动机, 删除14P)


ENGINE SIDE CONNECTOR

ENG.1 公端 三菱電線 (M) NMWP32M-GY (32P)

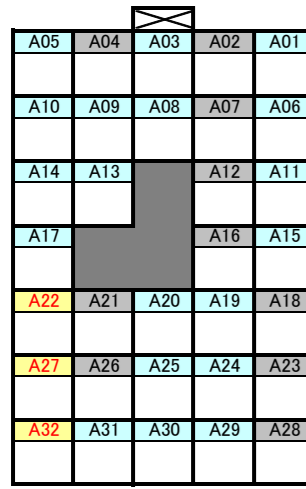


连接(车体)侧 母端 32PIN.H.CONN 三菱電線 (F) ????? (32P)

ENG.5 母端 SUMITOMO (F) 6189-0714 (20P)

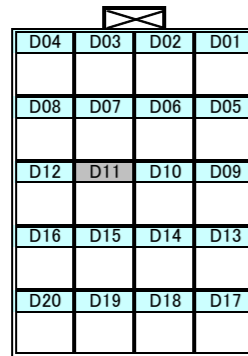


连接(车体)侧 公端 20PIN.H.CONN SUMITOMO (M) 6188-0494 (20P)

ENG.2 公端 YAZAKI (F) 7123-7564-40 (SWP-16P)

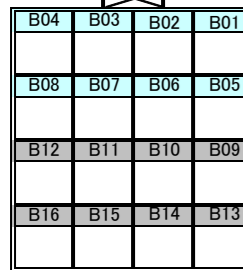


连接(车体)侧 公端 16PIN.H.CONN (EGR) 矢崎 (M) 7122-7564-40 (SWP-16P)

ENG.3 母端 YAZAKI (F) 7123-7544-40 (SWP-14P)

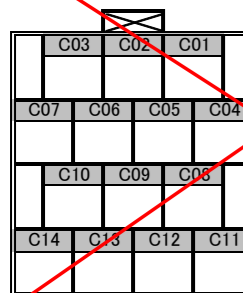

连接(车体)侧 公端 14PIN.H.CONN 矢崎 (M) 7122-7544-40 (SWP-14P)

 ENG.4 公端 YAZAKI (F) 7123-4210-40 (Y-1P)



连接(车体)侧 公端 1PIN.H.CONN (GLOW) 矢崎 (M) 7222-4210-40 (Y-1P)

32PIN:A

20PIN:D

16PIN:B

14PIN:C

1PIN:H

Main table with columns: 参考IT4, 中国3次, PIN.No, Terminal name, Terminal at ECM side, Wire dia, Wire type. It lists 50 terminals from A01 to H01 with their respective functions and wiring details.

Annotations on the right side of the table: ←不使用, ←从未使用, ←车体侧线束, ←若无使用需求则删除.

↑ 参考IT4 中国3次